


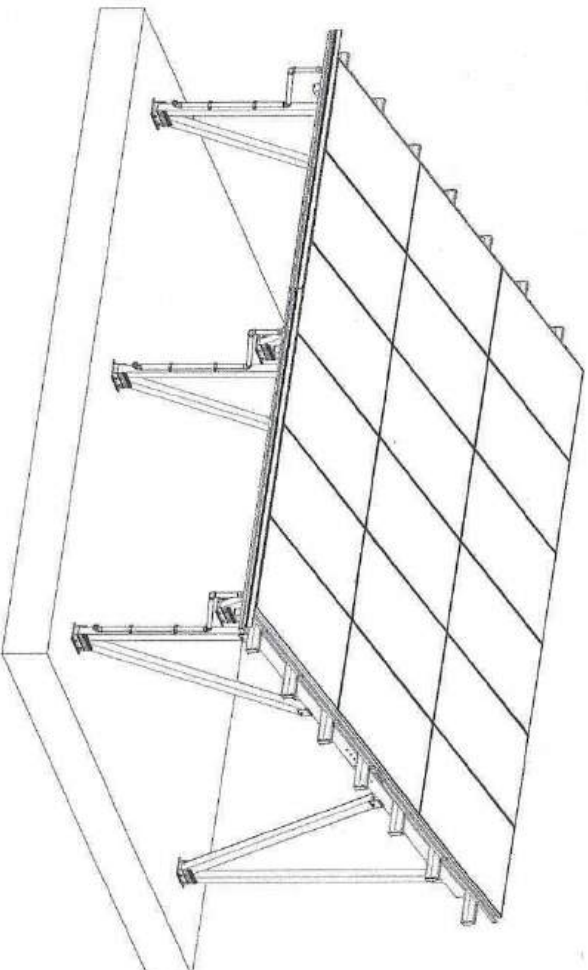


Double carport mounting systems to Norway Installation Manual Ver.1.0





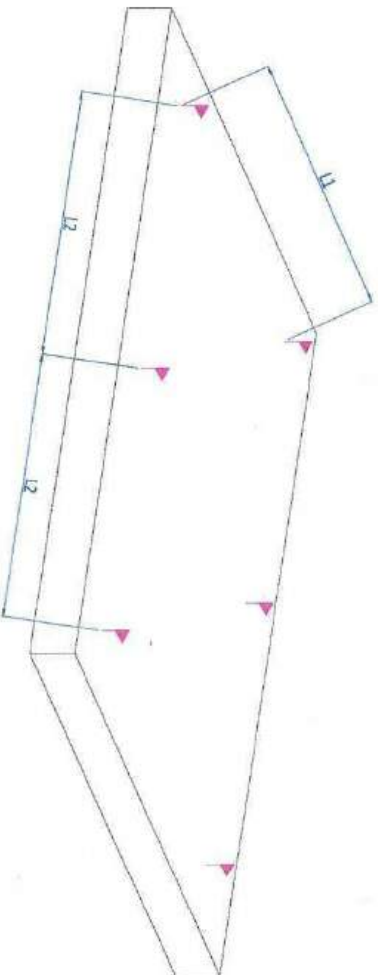


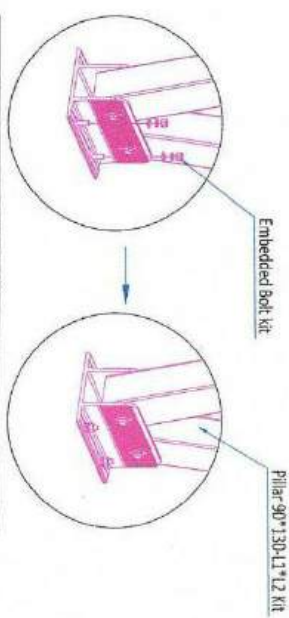

Step 1

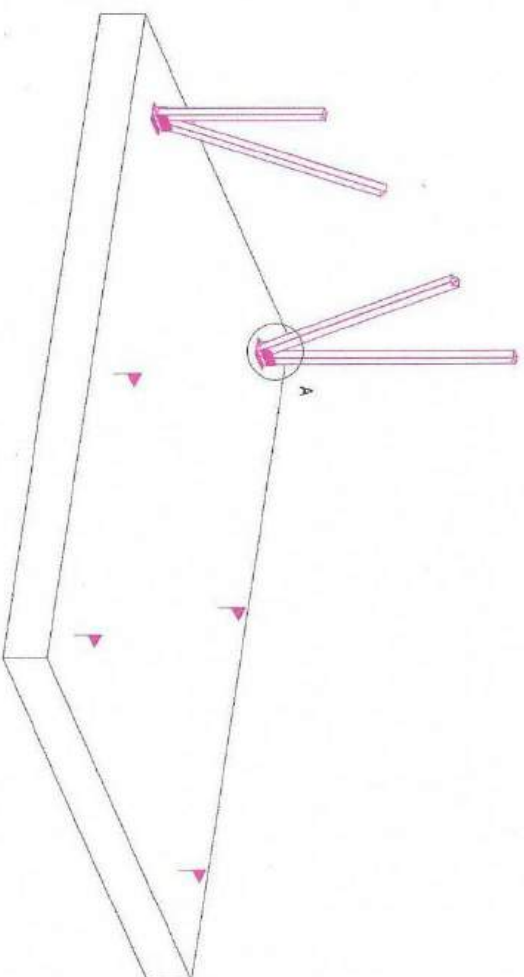




Step 2

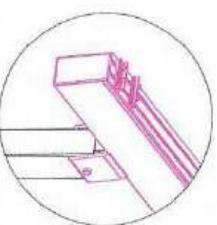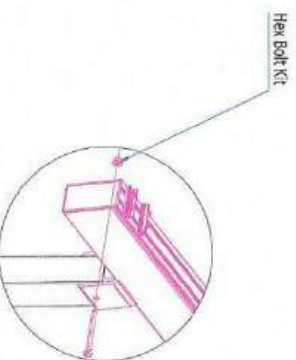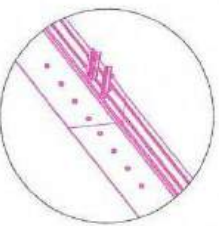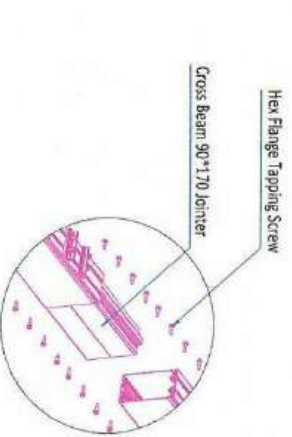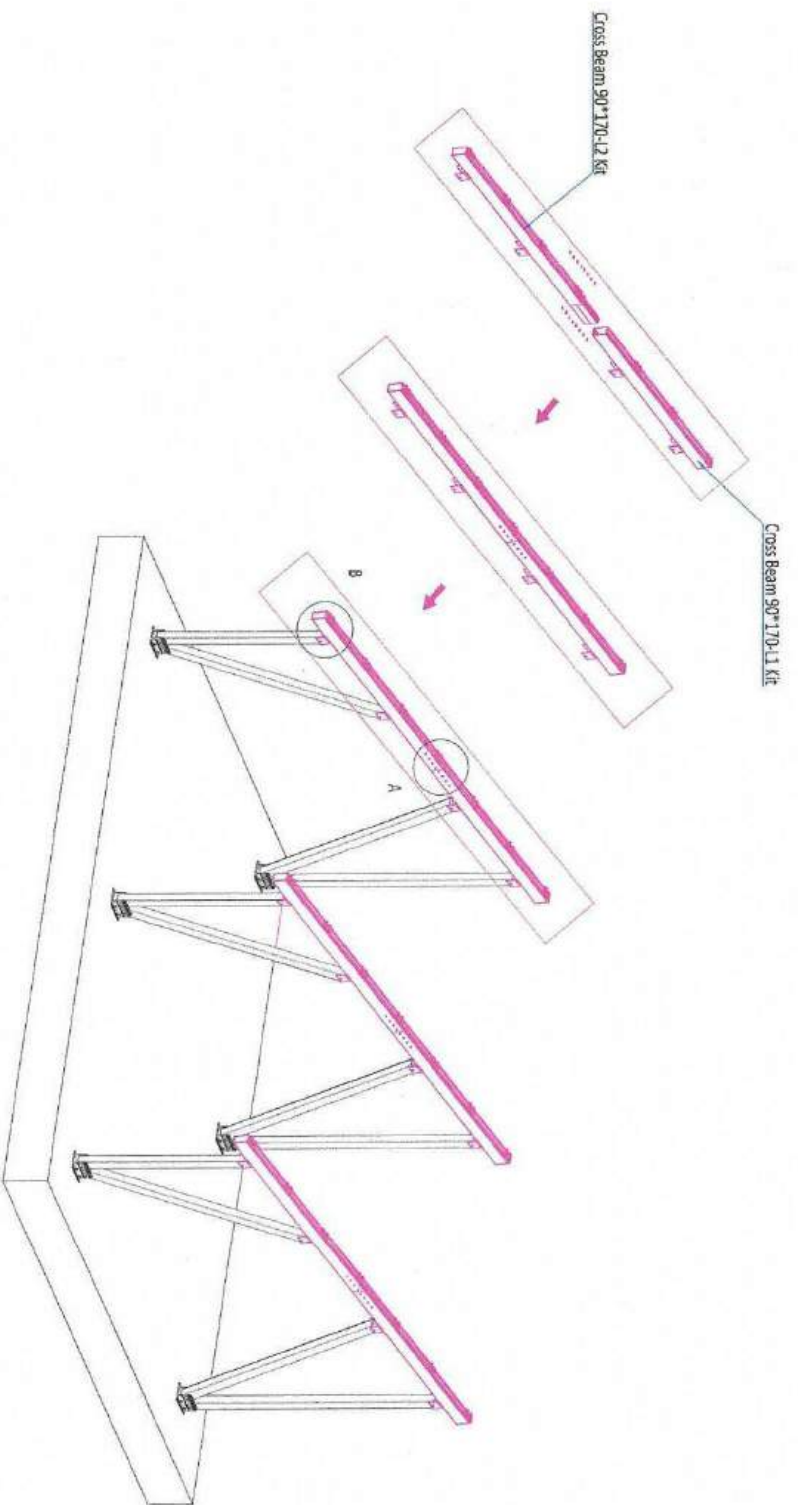


Step 3

A

B

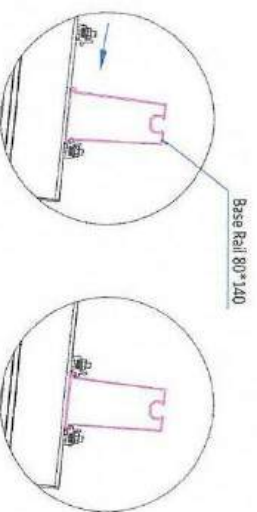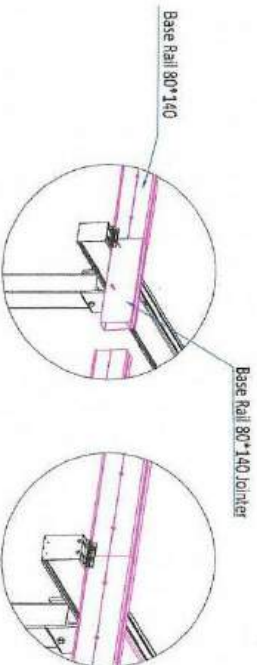
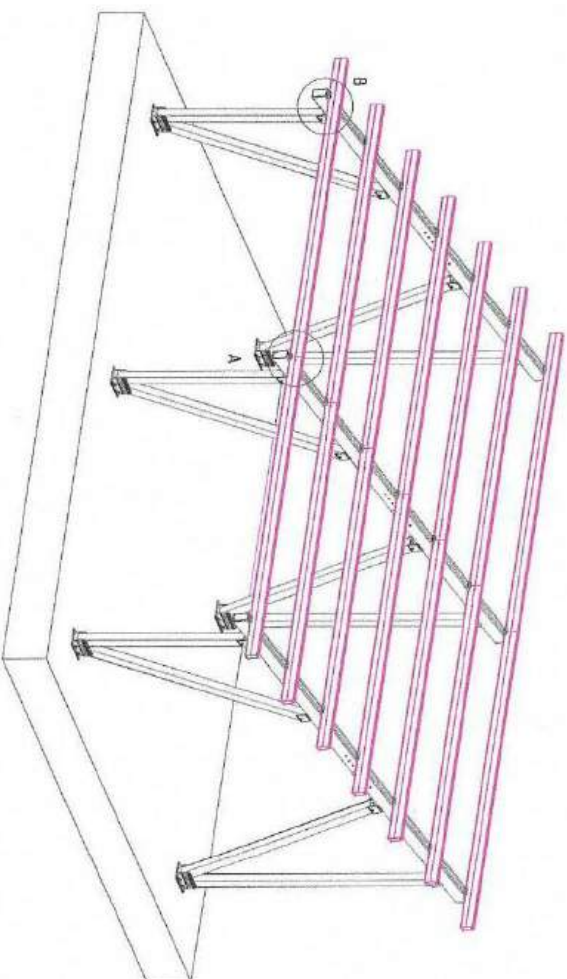


Step 4

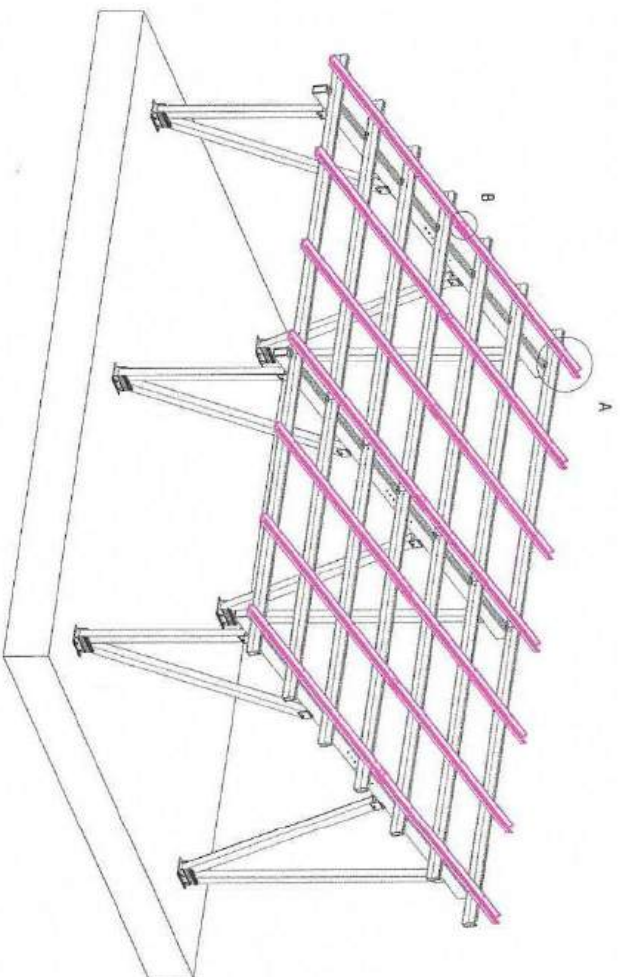


Rail fixing part

Base Rail 110*65

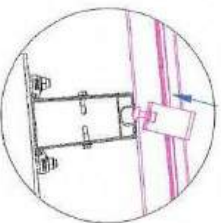
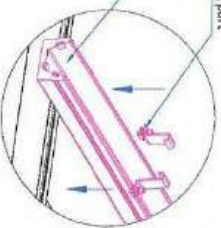


A

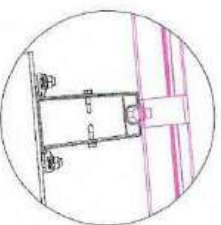


W-Base Rail 110*65 Joiner Kit

N-Base Rail 110*65 Joiner Kit

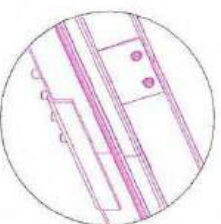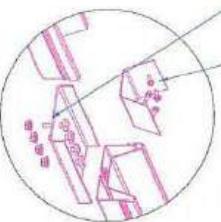





B

Step 5

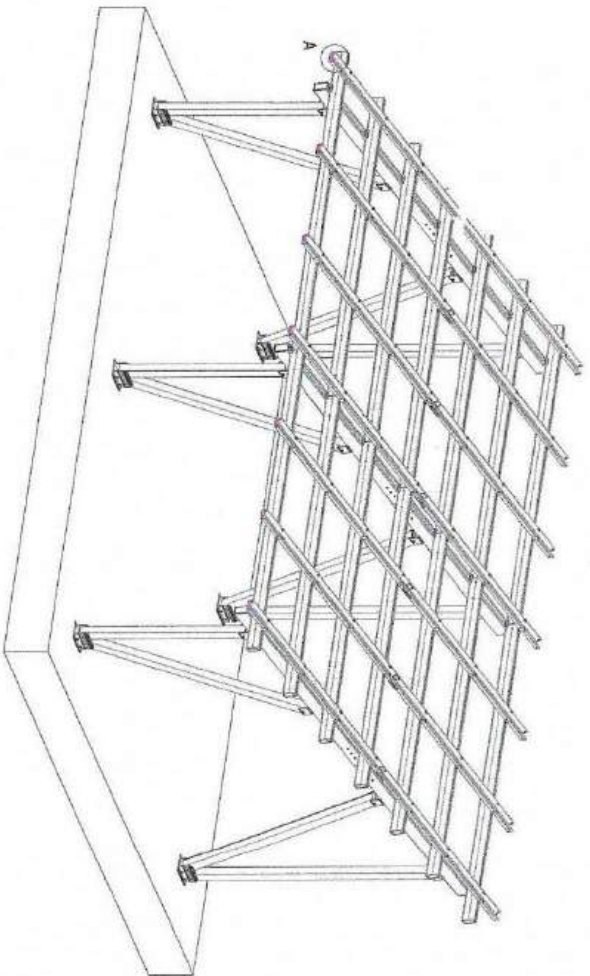

Hex Flange Tapping Screw







Steel Hanger-10"

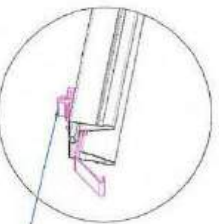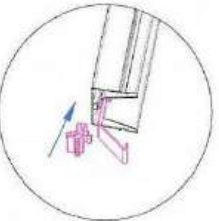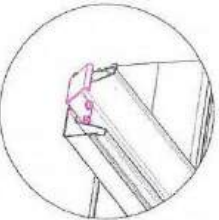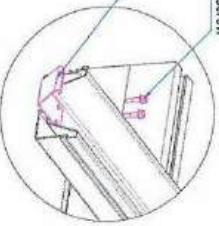

M8 Rail Clamp - 1 Kit

A

Step 6

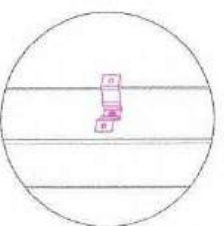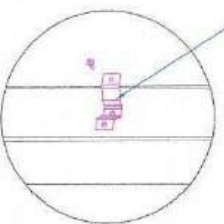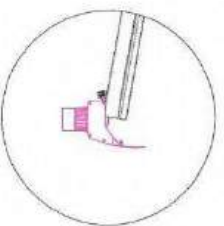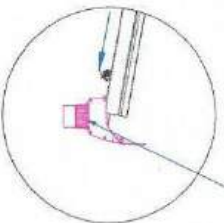
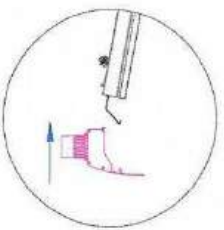
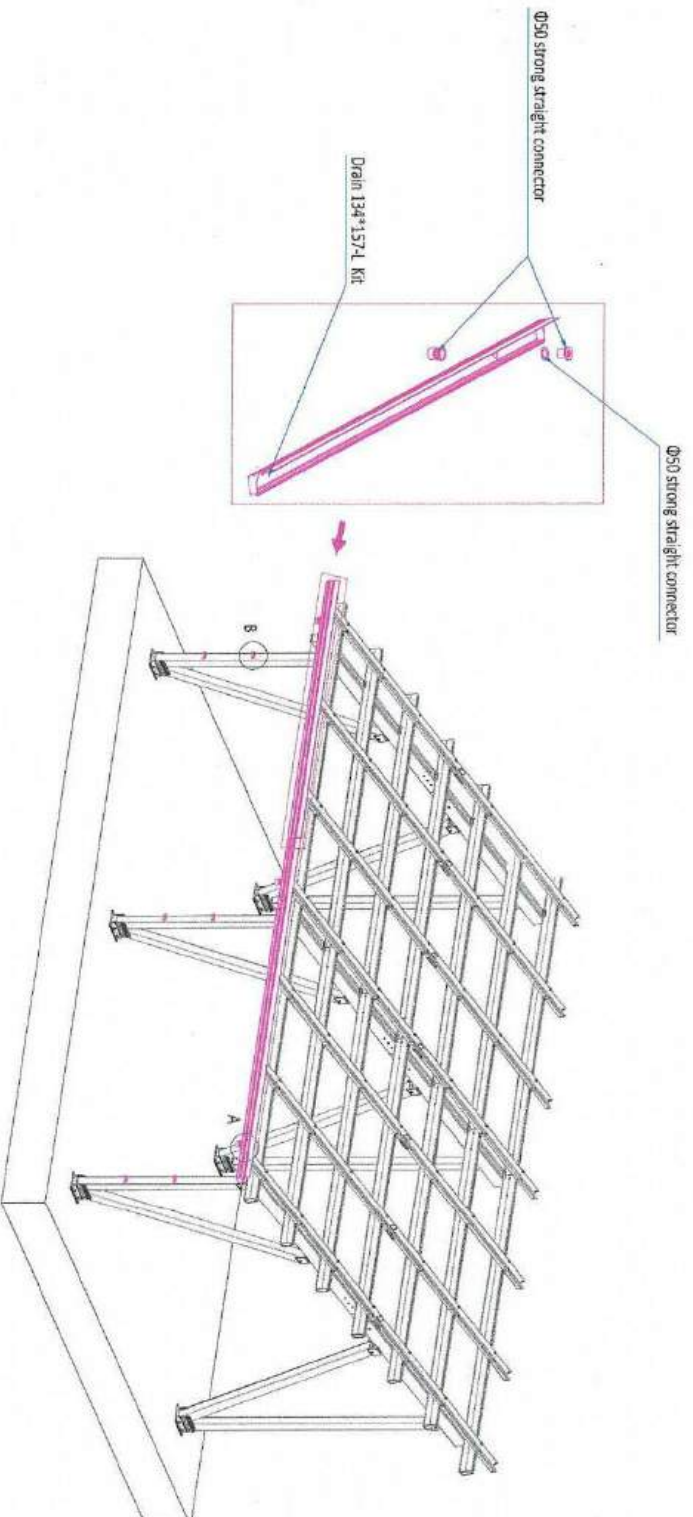


A





B

Step 7

PS: Install the 1-Main Clamp-40 on the component border in advance

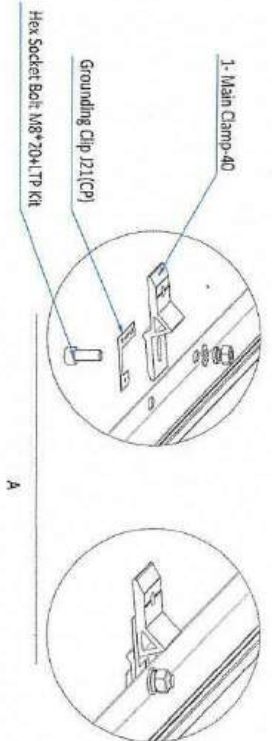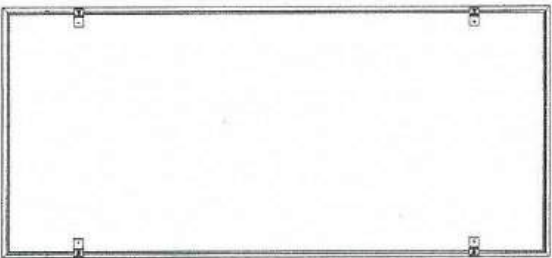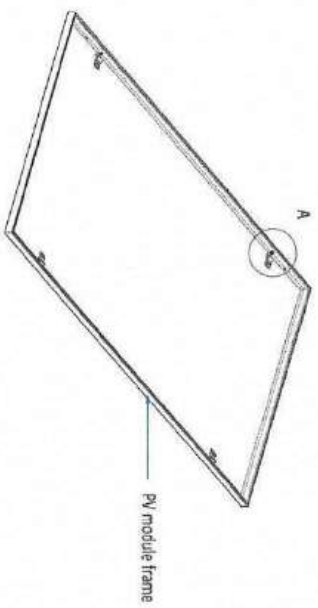


Step 9

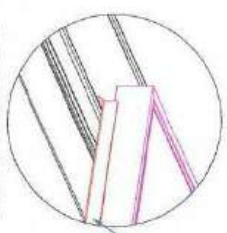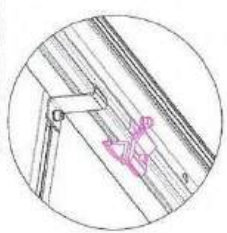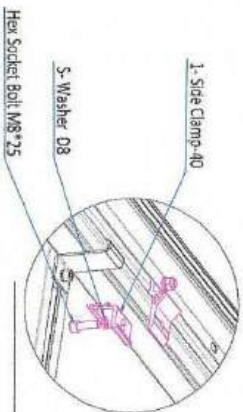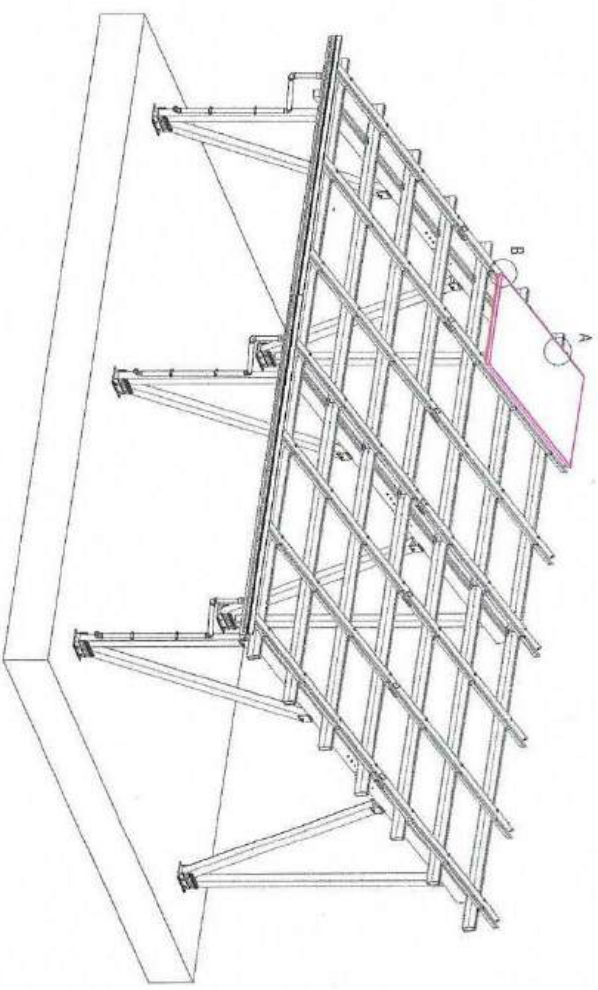

A



B

Step 10

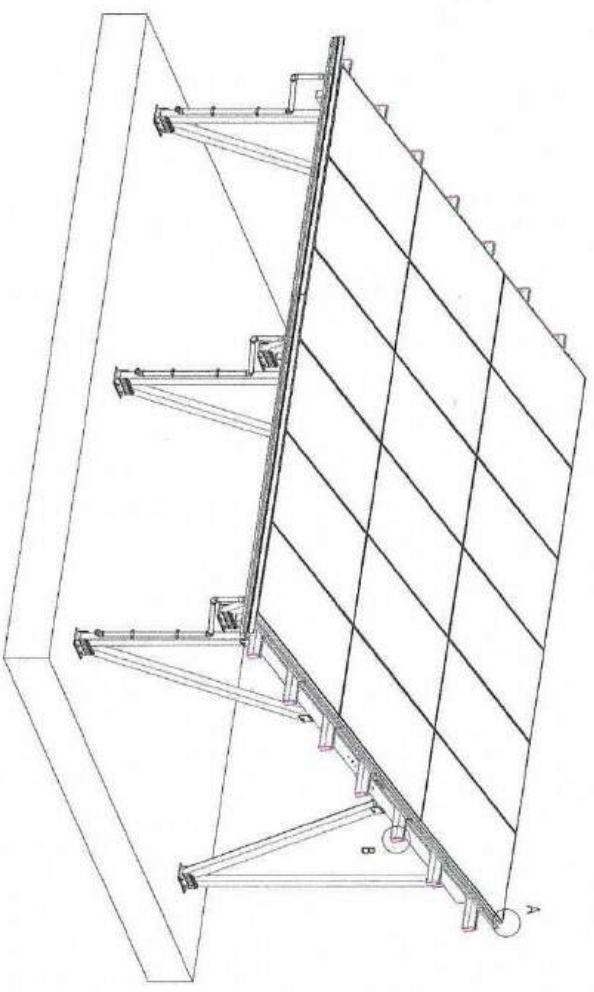



Base Rail 110*65

Grounding kit

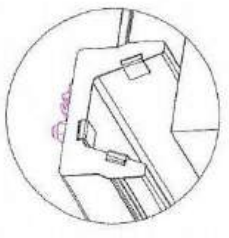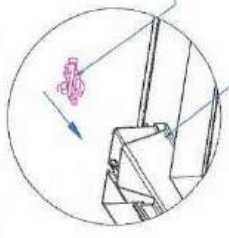

A

CNP Head Tapping Screw

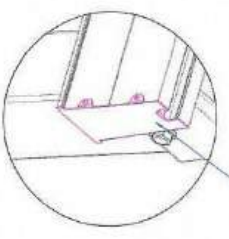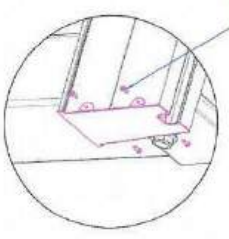

Base Rail Cap

B

END